

TK-5720, 5820

Use CAB-00228

EDIT – Optional Features, Common Page 3, set com port 1 to “**DATA**”, polarity to **NORMAL**
.....Extended Function, AUX Tab, set DB25 pin 21 to “**INPUT**”, function to “**EXTERNAL PTT (voice)**”
.....Extended Function, MODULATION LINE tab., on the External PTT Voice, set MI2 line to **CONNECT**

EDIT – Option Features, Option 1, Common Page 3, set PC Interface Protocol to **VERSION 3**.

TK-5710, 5810, 5910

Use CAB-00228

EDIT – Optional Features, Common Page 3, set com port 1 to “**DATA**”, polarity to **NORMAL**
.....Extended Function, AUX Tab, set DB25 pin 21 to “**INPUT**”, function to “**EXTERNAL PTT (voice)**”
.....Extended Function, MODULATION LINE tab., on the External PTT Voice, set MI2 line to **CONNECT**

EDIT – Option Features, Option 1, Common Page 4, set PC Interface Protocol to **VERSION 2**.
.....Common Page 4, check box of “**Serial Output J Command Serial Output**”

TK-7180, 8180

Use CAB-00228

EDIT – Optional Features, Common Page 3, set com port 1 to “**DATA**”, polarity to **NORMAL**
.....Extended Function, AUX Tab, set DB25 pin 21 to “**INPUT**”, function to “**EXTERNAL PTT (voice)**”
.....Extended Function, MODULATION LINE tab., on the External PTT Voice, set MI2 line to **CONNECT**.

<i>SyTech Corp.</i>	
RCU I/O Type Ten	
CAB-00228_txt	02/20/2013